



HTC One V Battery Replacement

This guide will provide the steps to install a new battery in your HTC One V.

Written By: Michael Lucido



INTRODUCTION

If your phone will not hold a charge very long or even turn on, a faulty battery might be the problem. A new one can be installed using this guide.



TOOLS:

- [Jimmy](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Bottom Assembly




- Power off your device.
- Remove the bottom cover by sliding it off.

Step 2




- Remove your SIM card.
- Remove the four screws securing on the bottom casing.
 - Two 3.0 mm Philips #0 screws in the top left and right corners.
 - Two 2.0 mm Philips #0 screws in the bottom left and right corners.

Step 3

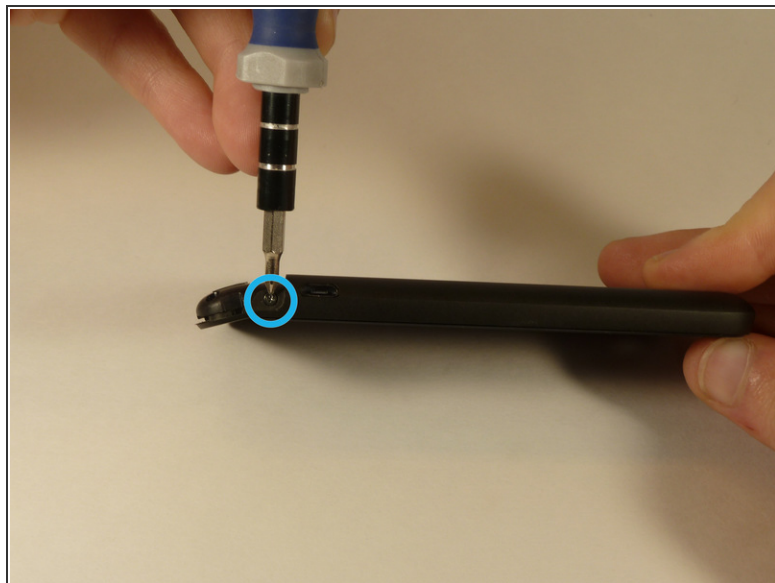


- Remove the 2.0 mm Philips #0 screw. There is an identical screw in the same spot on the other side of the phone.

Step 4

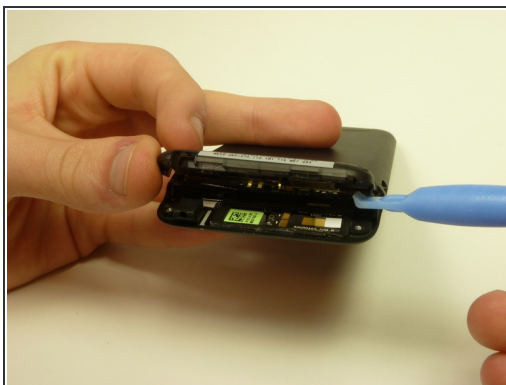

- Use a plastic opening tool to pry open the bottom casing.
- Remove the bottom casing by pulling it towards you.

Step 5 — Back Case

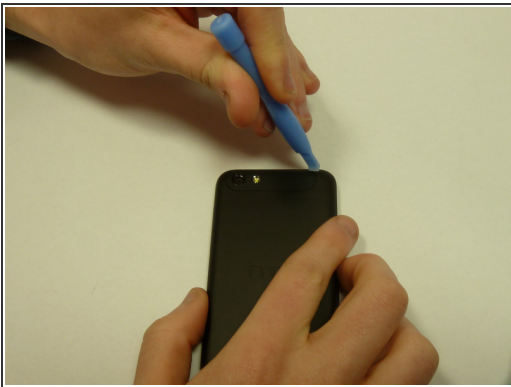

- Pry up rear camera panel with the plastic opening tool.
- Remove both screws securing on the back case.
 - One 4.0 mm Philips #0 screw.
 - One 3.0 mm Philips #0 screw.

Step 6



- Use jimmy tool to pry up OEM SIM Card and SD Card reader contact.
 - ⚠ Pry from right to left to avoid potential damages to the ribbon.

Step 7





- Gently push on the two rear, visible corners of the bottom of the motherboard.
- Gently pull the screen out from the front of the phone, while feeding the OEM reader contact through the opening.

Step 8 — Battery



- Pry up the battery with the flat end of the spudger.

Step 9

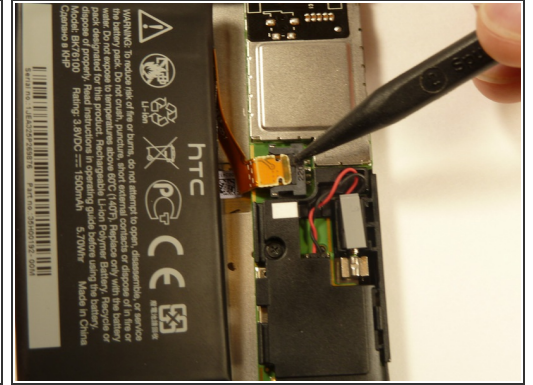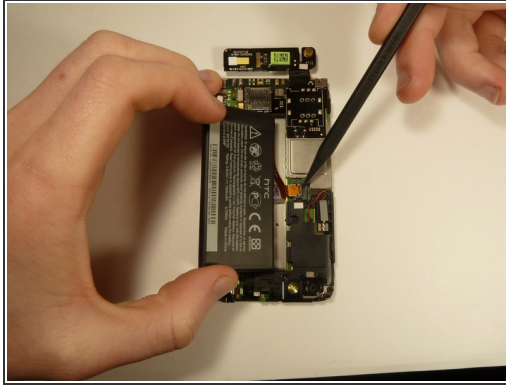

- Gently lift up the battery away from the edge of its housing.
- Use the point end of the spudger to push the connection out of its housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 07:02:40 AM.